


# Firestone

## SPECIALTY PRODUCTS

---

### PondGard™ Rubber Liner Installation Detail 5


#### Install a Repair Patch Using a QuickSeam™ Repair Kit

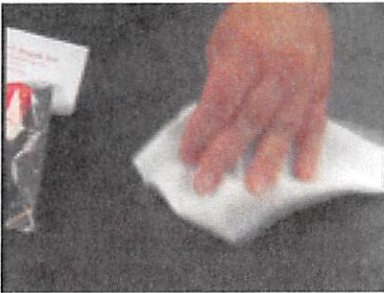

**Step 1-** Ensure the liner is dry and free of mud and other contaminants.



**Step 2-** Apply the QuickPrime™ Plus Primer by pouring a small amount onto the scrubber pad and applying it to the surface of the PondGard panel beyond the perimeter of the area to be repaired with a patch.

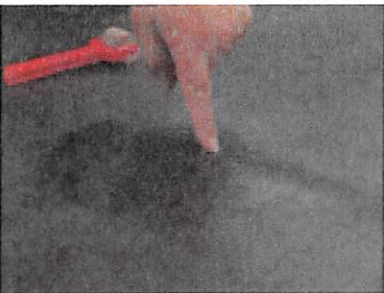

**Step 3-** Test the primer flash-off by touching the primed area with your finger and pushing forward at an angle. The primer should not string as your finger is moved up and away.



**Step 4-** Install the QuickSeam patch by peeling away the release paper and placing the patch over the damaged area of the liner.

**Note:** Edges of the QuickSeam patches may be rounded or cut diagonally to prevent peeling.

# Firestone

## SPECIALTY PRODUCTS

### PondGard Rubber Liner Installation Detail 5 (Con't)

#### **Install a Repair Patch Using a QuickSeam Repair Kit**



**Step 5-** Roll the patch evenly over the area to be repaired in order to properly mate the patch and liner together.

**Note:** If the area cannot be adequately repaired using the two 6.00" by 6.00" (15.24 cm x 15.24 cm) QuickSeam patches, call Firestone Specialty Products at 800-428-4442 for additional assistance.

#### **This Detail featured these Firestone Products:**

##### **Product**

- PondGard Rubber Liner
- QuickSeam Repair Kit

##### **Item #**

Varies by Size  
W56RAC0030