

Firestone

SPECIALTY PRODUCTS

PondGard™ Rubber Liner Installation Detail 11

Installing a QuickSeam™ Pre-Molded Pipe Boot



Step 1- Cut a hole in the PondGard panel that is approximately 75% of the outside diameter of the pipe protruding from the substrate.



Step 2- Then, slide the PondGard panel into place over the base of the pipe.



Step 3- Ensure the liner is dry and free of mud and other contaminants.



Step 4- Using scissors, cut the pipe boot at the vertical rib that is just smaller than the pipe's outside diameter.

Firestone

SPECIALTY PRODUCTS

PondGard Rubber Liner Installation Detail 11 (Con't)

Installing a QuickSeam Pre-Molded Pipe Boot



Step 5- Using a scrubber pad and holder; apply QuickPrime™ Plus Primer to a 14.0" (35.56 cm) diameter area around the pipe. Make sure to extend primer past the adhered pipe boot flange area.



Step 6- Place a continuous bead of Water Block Seal at the proper elevation on the boot.



Step 7- Test the primer flash-off by touching the primed area with your finger and pushing forward at an angle. The primer should not string as your finger is moved up and away.



Step 8- Slide the pipe boot down over the pipe until the flange of the pipe boot contacts the pre-primed PondGard panel.

Firestone

SPECIALTY PRODUCTS

PondGard Rubber Liner Installation Detail 11 (Con't)

Installing a QuickSeam Pre-Molded Pipe Boot



Step 9- Remove the release paper.



Step 10- Smooth the pipe boot flange onto the PondGard panel.



Step 11- Using a hand roller; roll the pipe boot flange to insure adhesion to the PondGard panel.



Step 12- Attach and tighten the stainless steel clamp to the pipe boot rib that grips the pipe.

Firestone


SPECIALTY PRODUCTS

PondGard Rubber Liner Installation Detail 11 (Con't)

Installing a QuickSeam Pre-Molded Pipe Boot



Step 13- Apply a continuous bead of Lap Sealant HS or All Purpose Sealant over the top edges and the edges at the base of the boot.

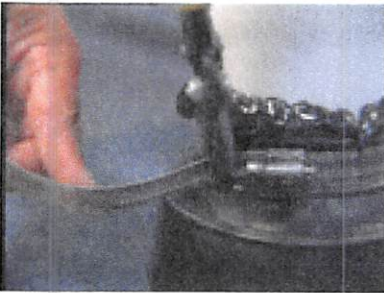

Step 14- Trim the excess metal from the clamp.

This Detail featured these Firestone Products:

Product

- PondGard Rubber Liner
- QuickPrime Plus Primer
- QuickSeam Pipe Flashing
- QuickScrubber™
- Hand Roller
- Water Block Seal
- Lap Sealant HS
- All Purpose Sealant

Item #

Varies By Size

or
W563587041
W563587044
W563581063
W563582045
W563582023
W563587071
W563587031
W563587078