

# Firestone

## SPECIALTY PRODUCTS

---

### PondGard™ Rubber Liner Installation Detail 1


#### Excavation of a Pond or Containment Structure



**Step 1-** Remove all vegetation, rock or debris that is 0.5" (12.7 mm) or larger.



**Step 2-** Compact the soil to 85 to 95% of Standard Proctor density.

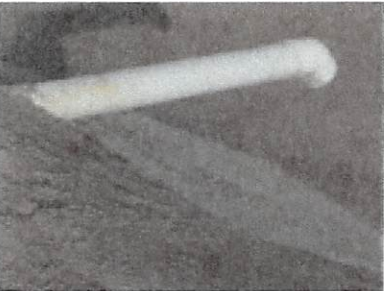

**Step 3-** Compact any soil around penetrations or masonry structures to 95% of Standard Proctor density.



**Step 4-** Drain any water prior to laying the PondGard membrane.